



SOMFY TUBULAR MOTOR



SOMFY TUBULAR MOTOR INSITU

WIRING DIAGRAMS

Overview

The Wiring Diagrams shown in this Design Manual cover a wide range of typical Louvretec motorised and electrical installations.

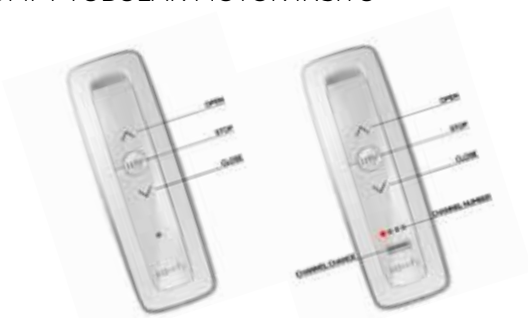
They provide the specific wiring details as required by architects, designers, builders and specifiers when planning Louvretec installations, and of course for electricians when providing connections.

Please contact your nearest Louvretec Dealer to discuss any customised options not currently shown.

Important Safety Instructions for Installation

An incorrect installation could lead to serious injury. Follow all of these instructions as well as those supplied with the motor & controls.

- Install an Omnipolar Isolation Switch upstream with a minimum contact opening space of 3mm
- All cabling must be protected from UV and physical stress (by others)
- Motors must be installed and programmed by competent installers
- For products necessary for the safe functioning of the motorised installation, refer to your nearest Louvretec Dealer
- Use only approved accessories
- Use only approved transmitters with the RTS Motors
- Before carrying out any form of maintenance, isolate the power to the motor and/or controls
- Examine the installation at regular intervals. Do not use the installation until any faults have been rectified
- Should you have any questions regarding the installation of Motors & Controls, contact your nearest Louvretec Dealer

SOMFY RTS CONTROLLERS
SINGLE & MULTIPLE

SOMFY TELIS 16 CHANNEL RETRACT ROOF REMOTE